


















FAGERHULT


SE - 566 80 Habo

Freedom


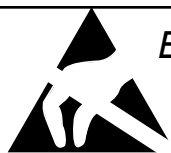


Electrostatic
sensitive
device

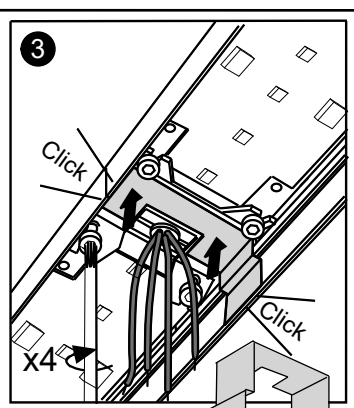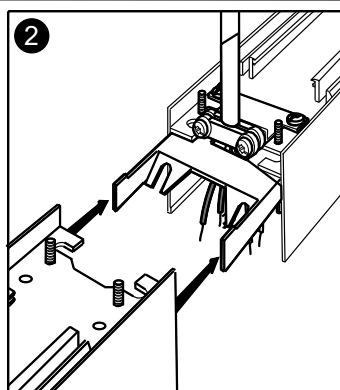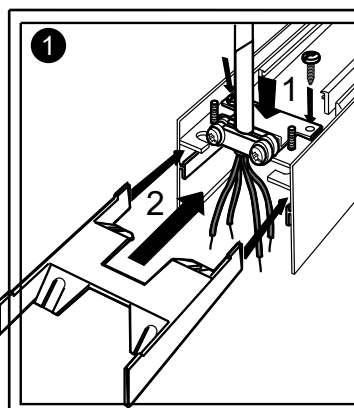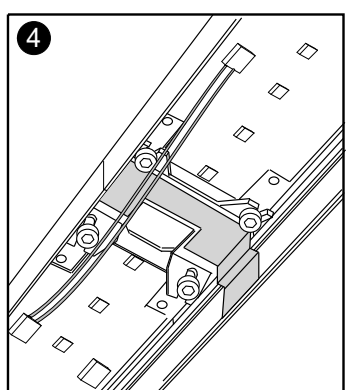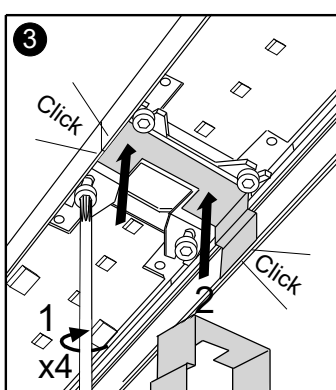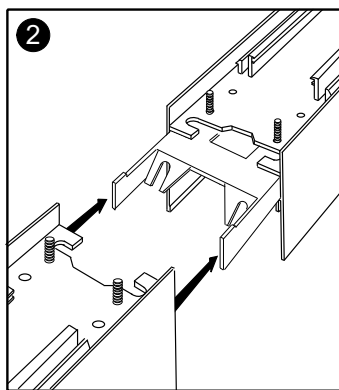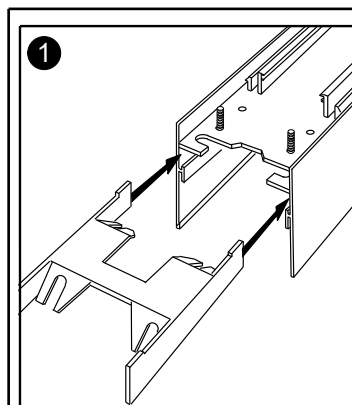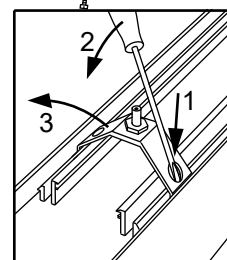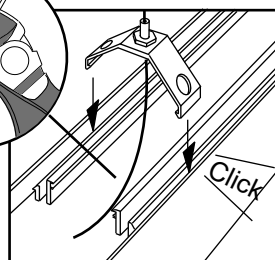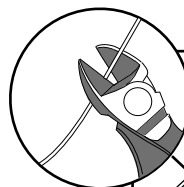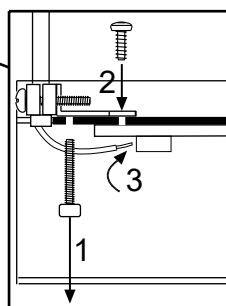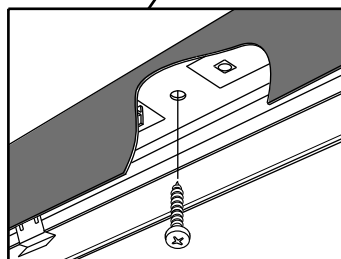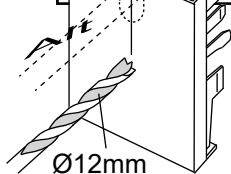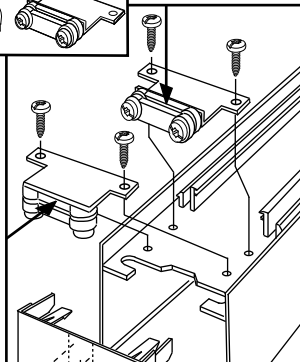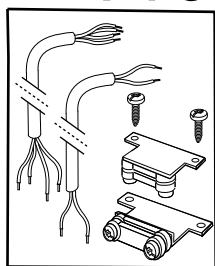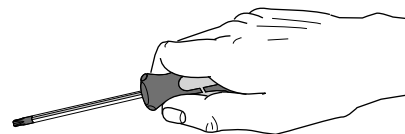


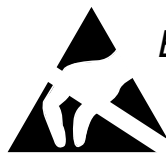


Electrostatic
sensitive
device



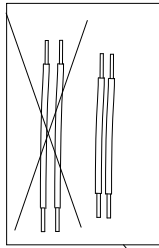
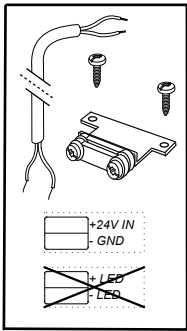


+24V IN
GND

+24V IN
GND

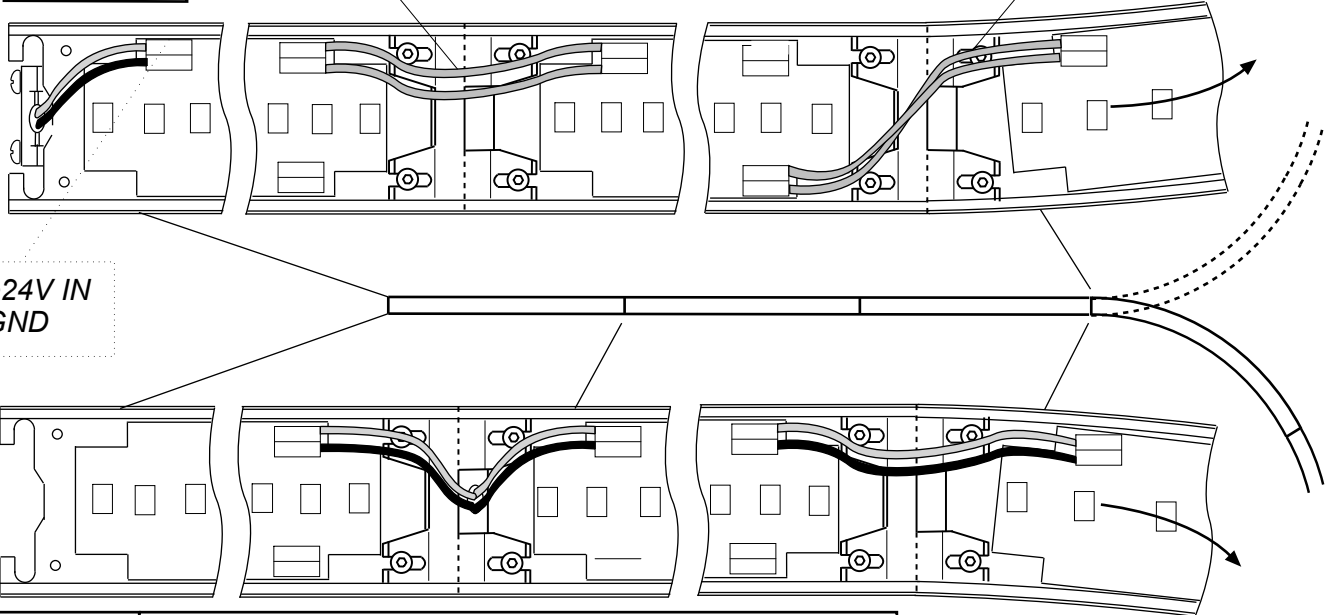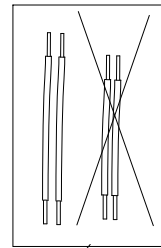


Använd endast specialkabel från FAGERHULT
Use only special cable available from FAGERHULT

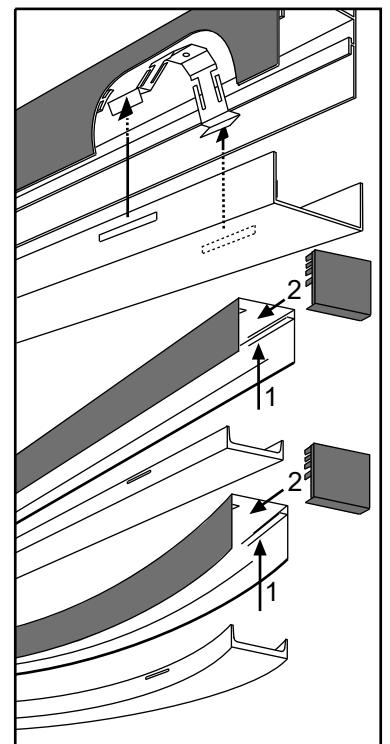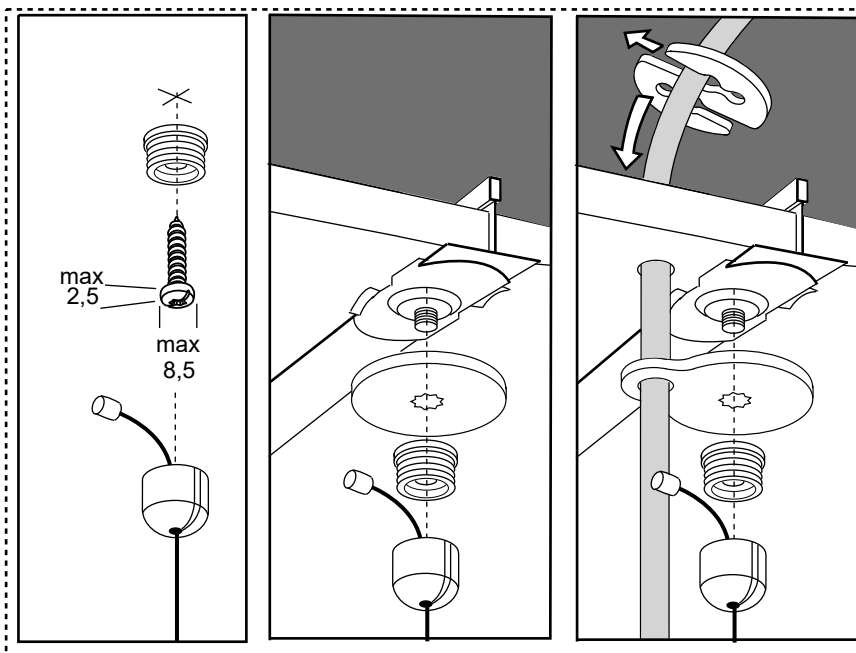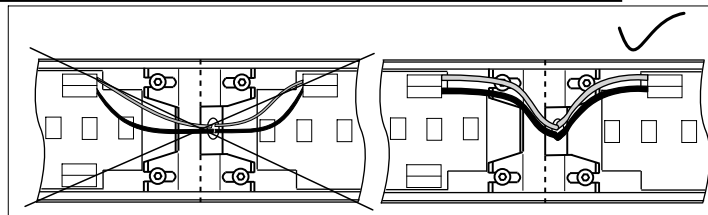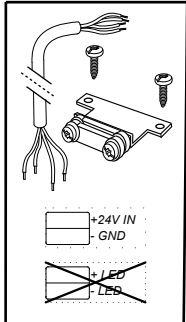

(S) Det är lämpligt att denna information
överbäras till användaren av anläggningen.
(D) Diese Informationen sind für den
Benutzer der Anlage vorgesehen.







 
(GB) It is appropriate that this information
is passed on to the users of the installation.
(SF) Nämä ohjeet tulee säilyttää ja luovuttaa
kiinteistön käyttäjälle.



FAGERHULT

SE - 566 80 Habo

Freedom Circuit diagram

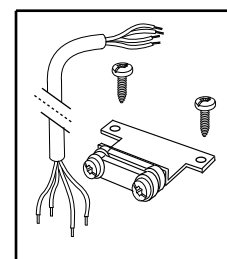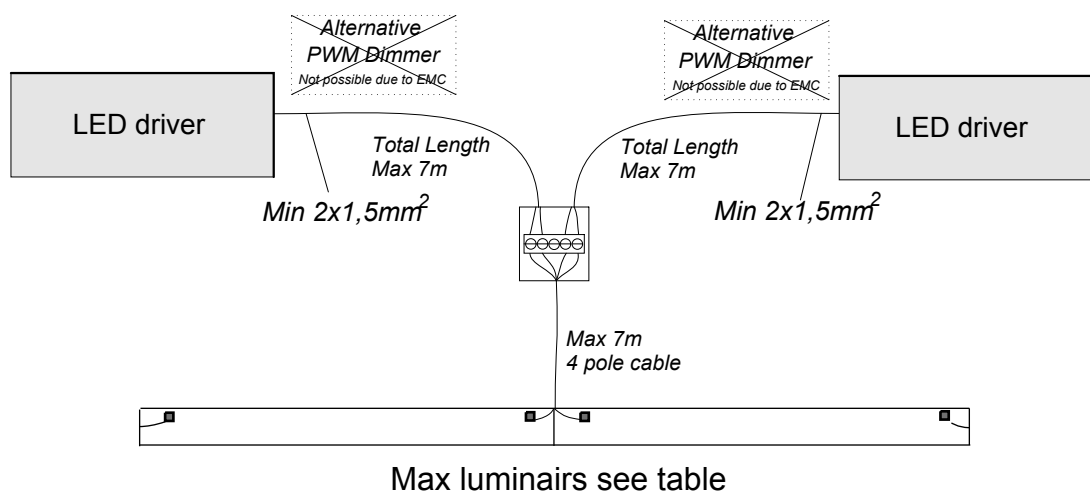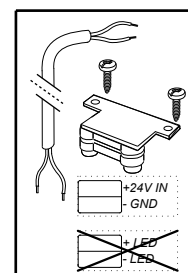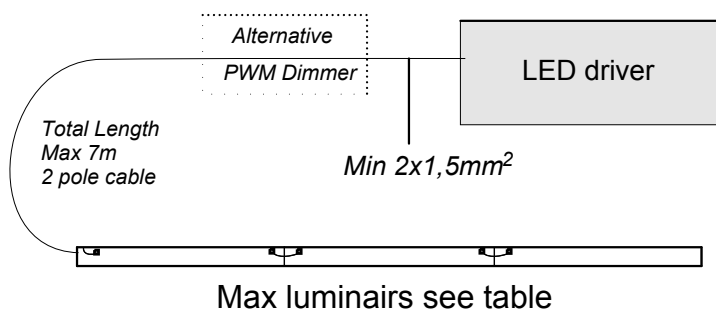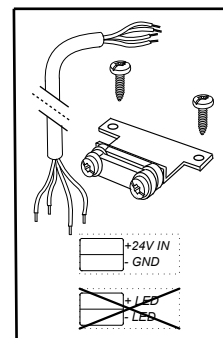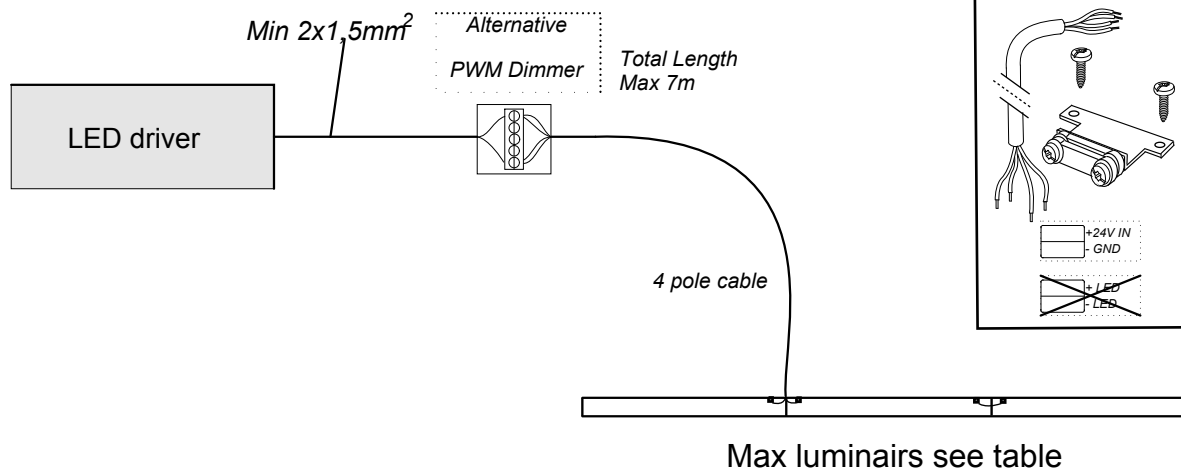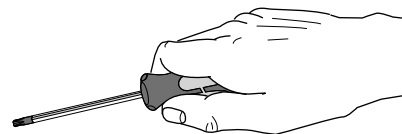

Optional drivers:	Config:	Art.no:	Numbers of luminaires			
LCU 180W 24V TOP SR	1 circuit	99009	13	11	6	5
LCA 100W 24V one4all SC PRE	1 circuit	99024	7	6	3	2
LCU 180W 24V TOP SR + 1 PWM 120W unit	1 circuit	99009 + 1x99110 alt. 99111	9	7	4	3
LCU 180W 24V TOP SR + 2 PWM 120W units	2 circuits	99009 + 2x99110 alt. 99111	6+6	5+5	3+3	2+2

