

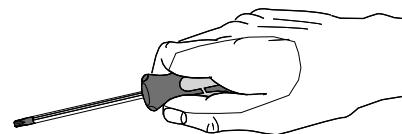
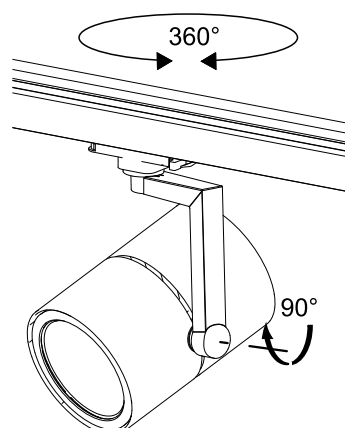
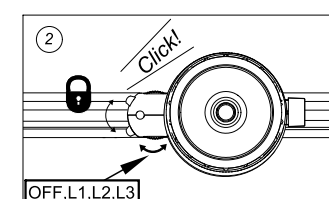
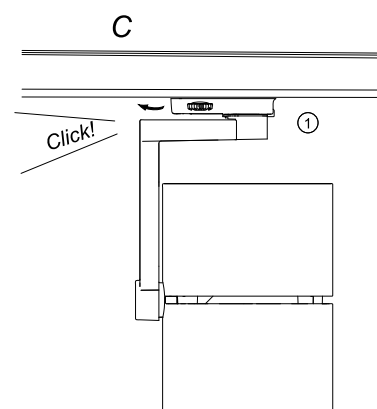
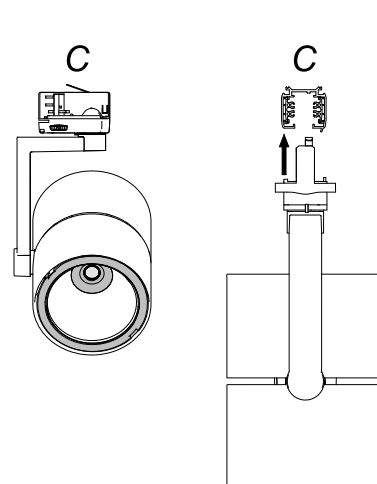
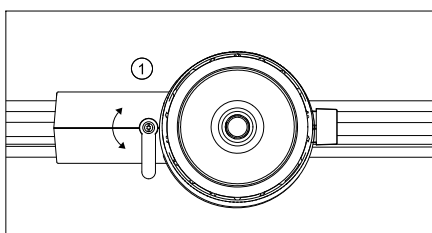
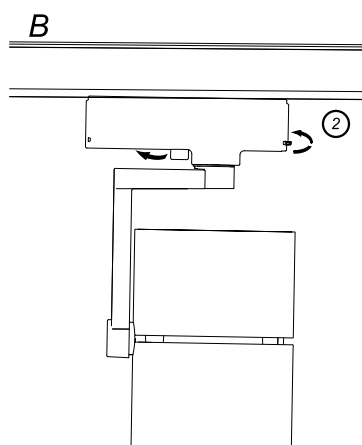
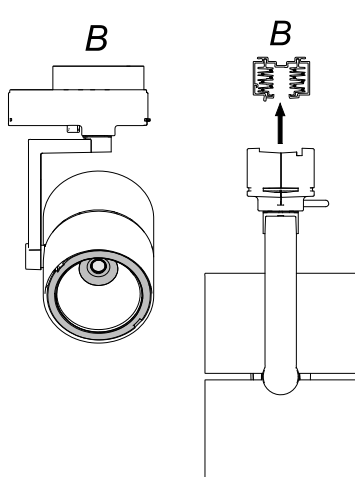
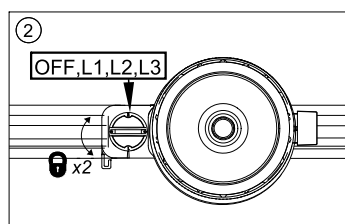


Touch Midi

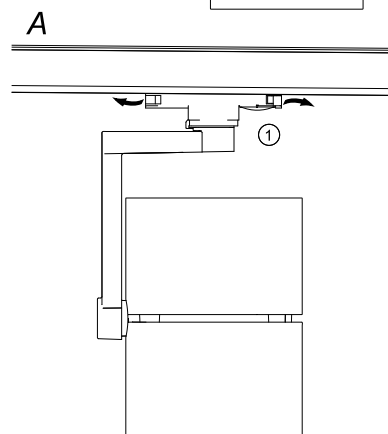



Alt.

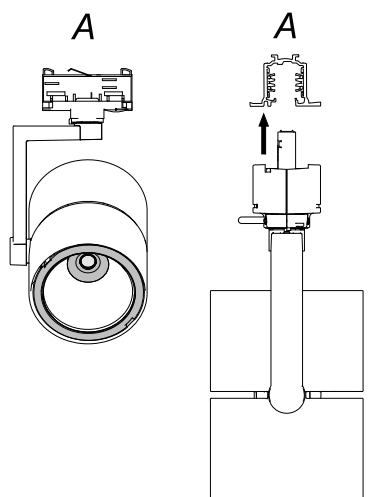

FAGERHULT

SE - 566 80 Habo

Touch Midi

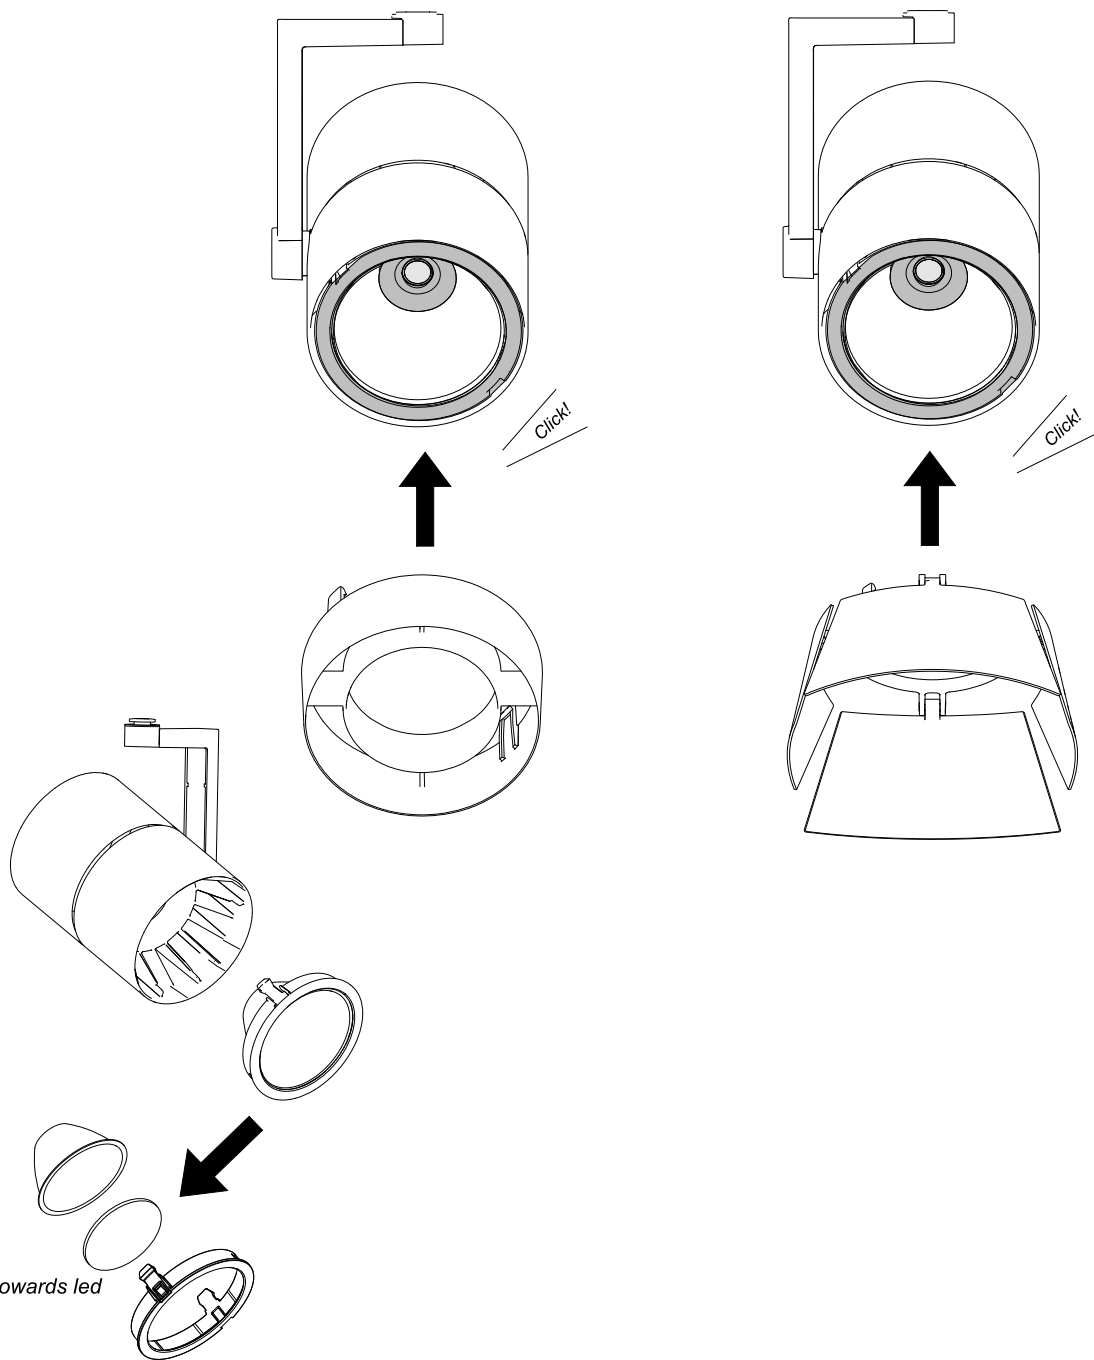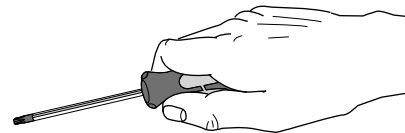

51769

Glossy side towards led

- (S)** Armaturdel MÅSTE anslutas innan nätspänning kopplas in!
- (GB)** The luminaire MUST be connected before plugging in the mains voltage!
- (D)** Die Leuchtenteil MUSS vor dem Einstecken der Netzspannung angeschlossen werden!

- (S)** Ljuskälla och drivdon ska enbart bytas ut av tillverkaren eller dess utsedda person.
- (GB)** The light source and control gear shall only be replaced by the manufacturer or its designated person.

Manufactured by Fagerhult
For UK market importer Fagerhult UK
33-34 Dolben Street, London, SE1 0UQ

- (S)** Det är lämpligt att denna information överlämnas till användaren av anläggningen.
- (GB)** It is appropriate that this information is passed on to the users of the installation.

