
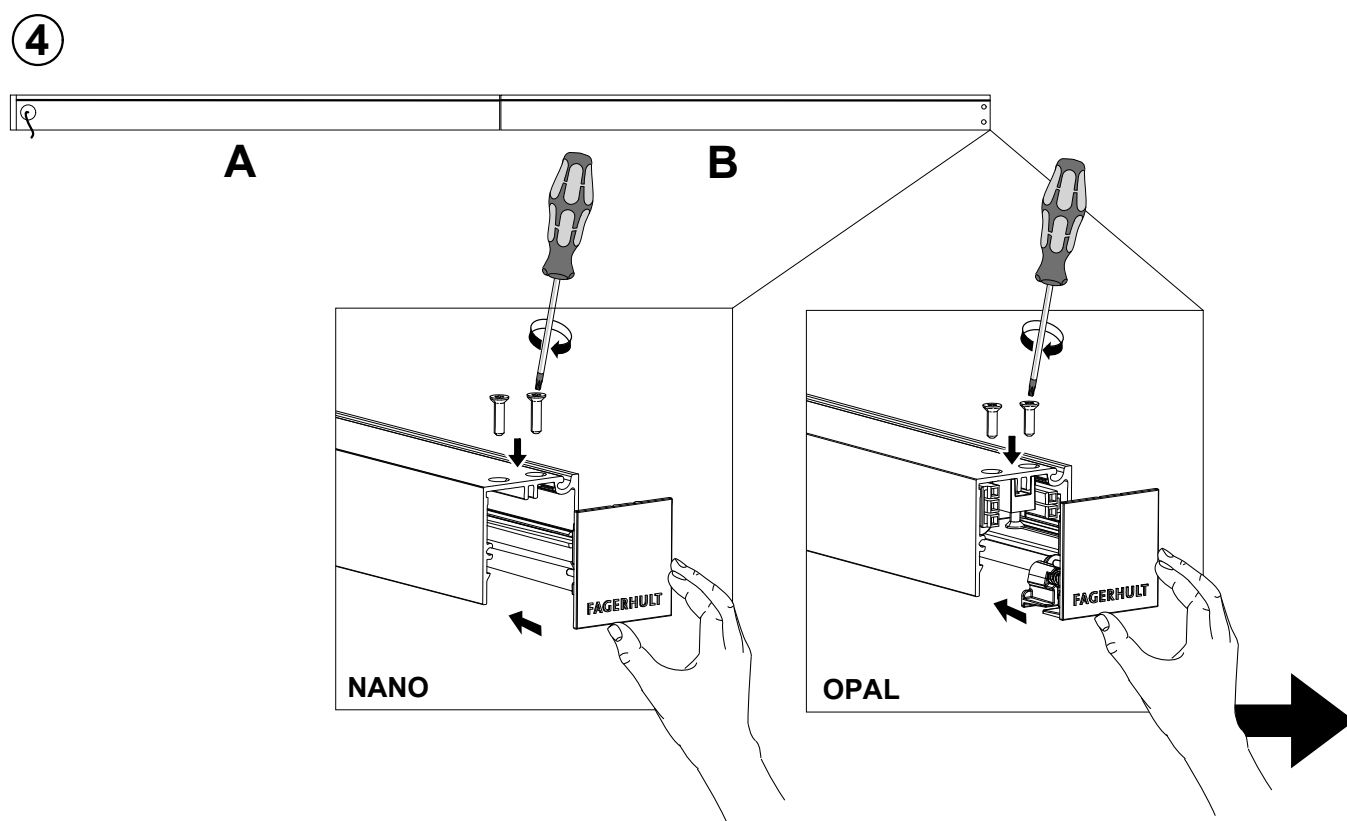
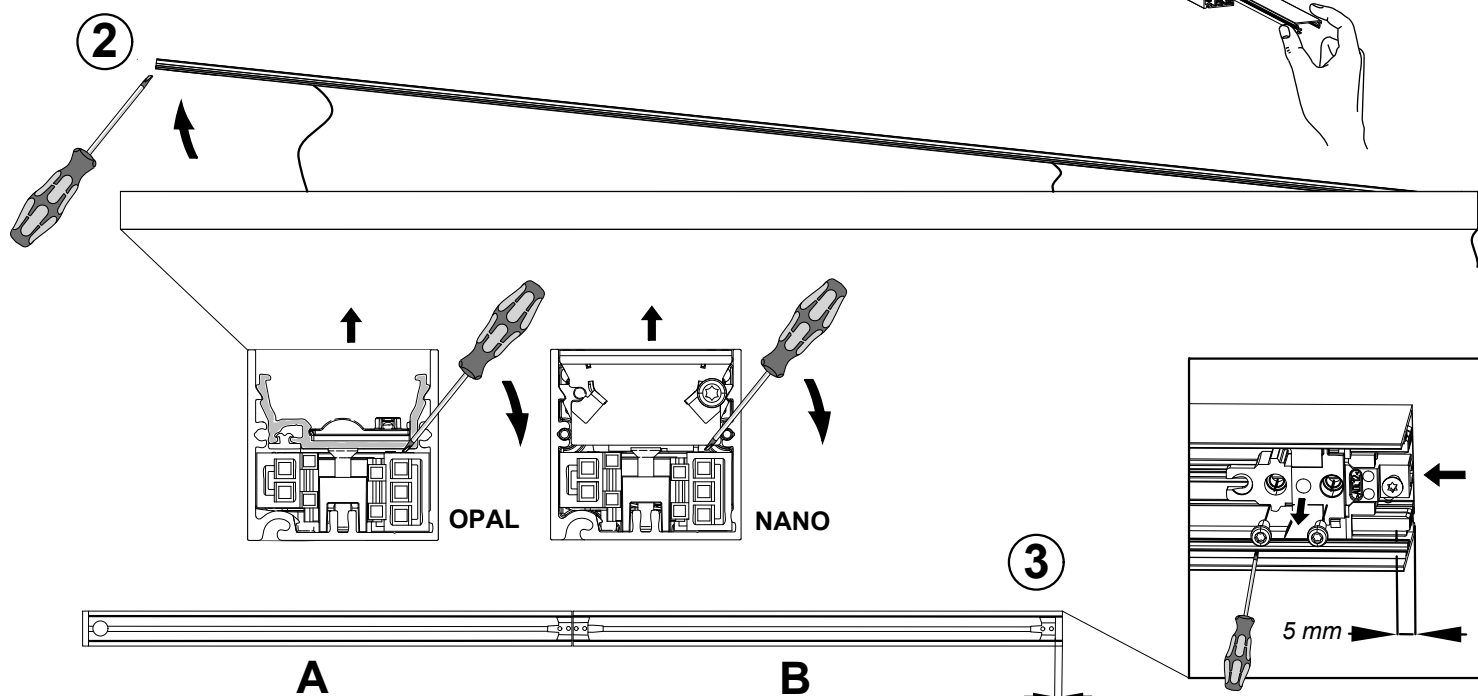
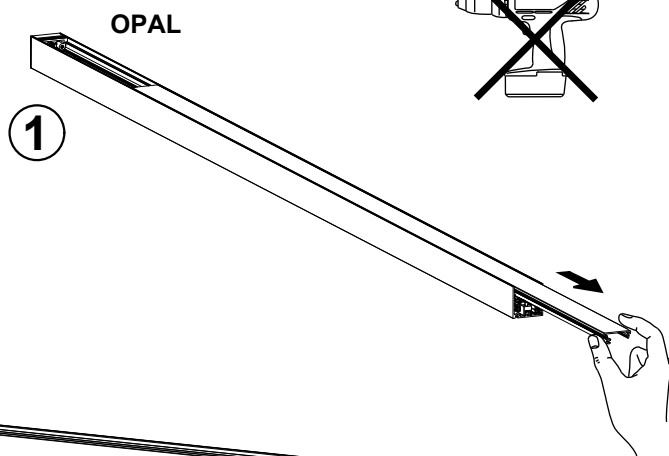
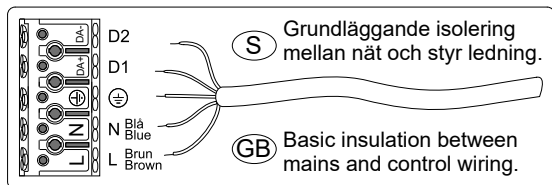


FAGERHULT


SE - 566 80 Habo

Notor 36 Ceiling


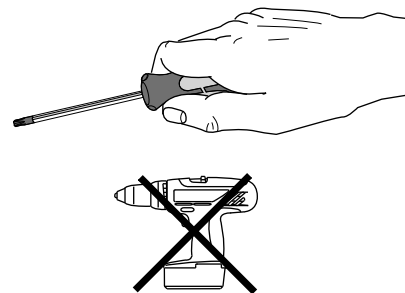


FAGERHULT


SE - 566 80 Habo

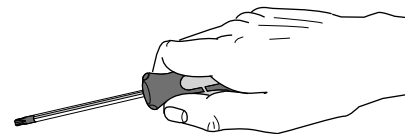


Notor 36 Ceiling

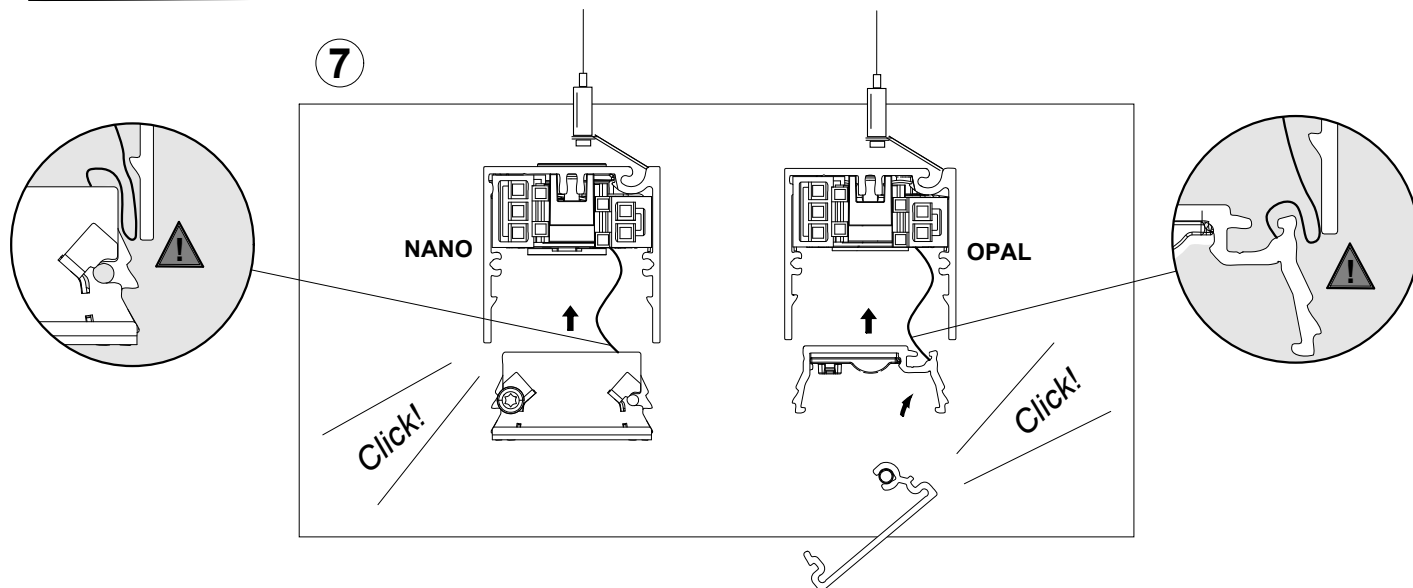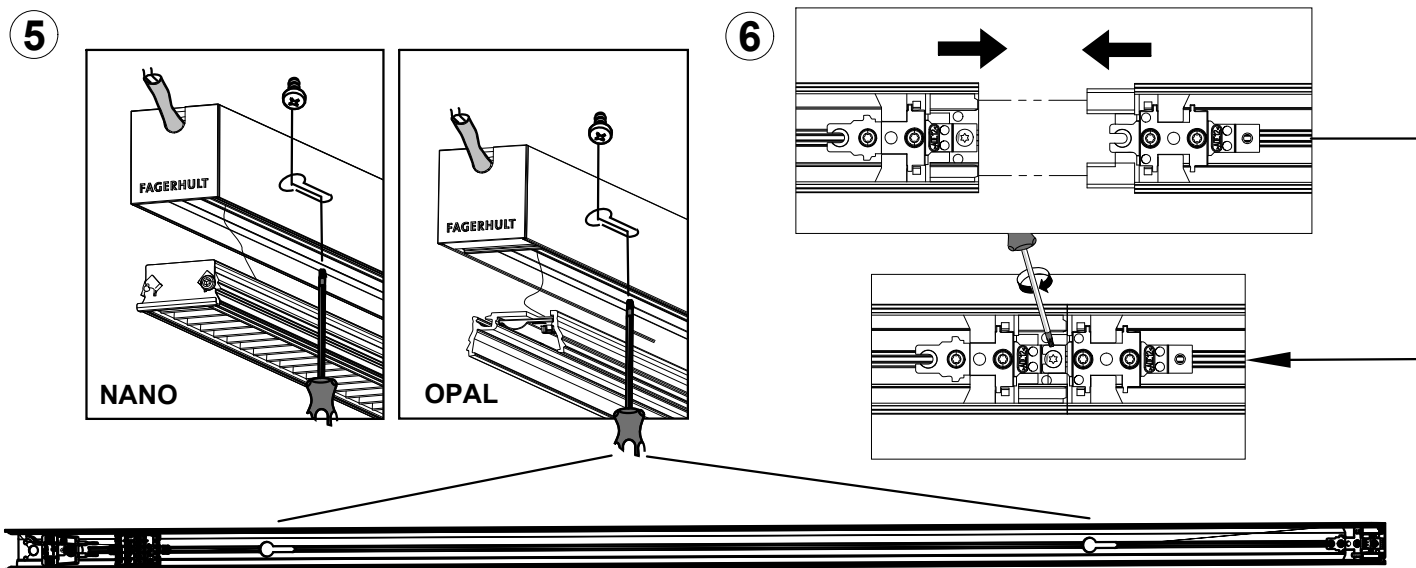


7.1

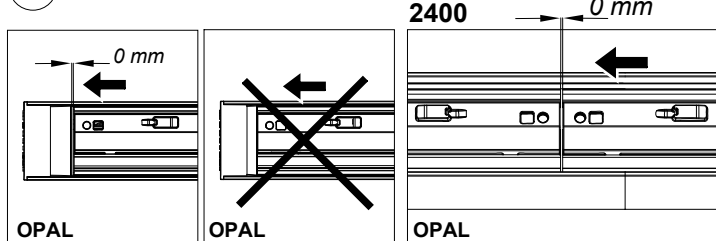

7.2

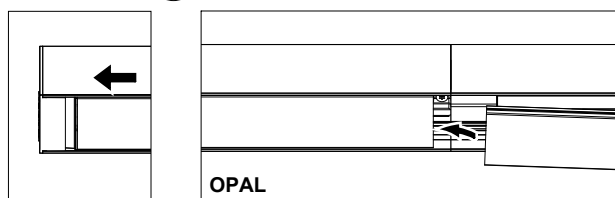


7.3

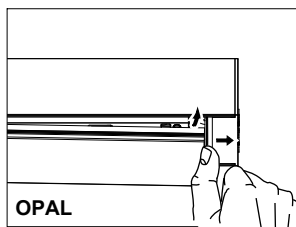




Notor 36 Ceiling


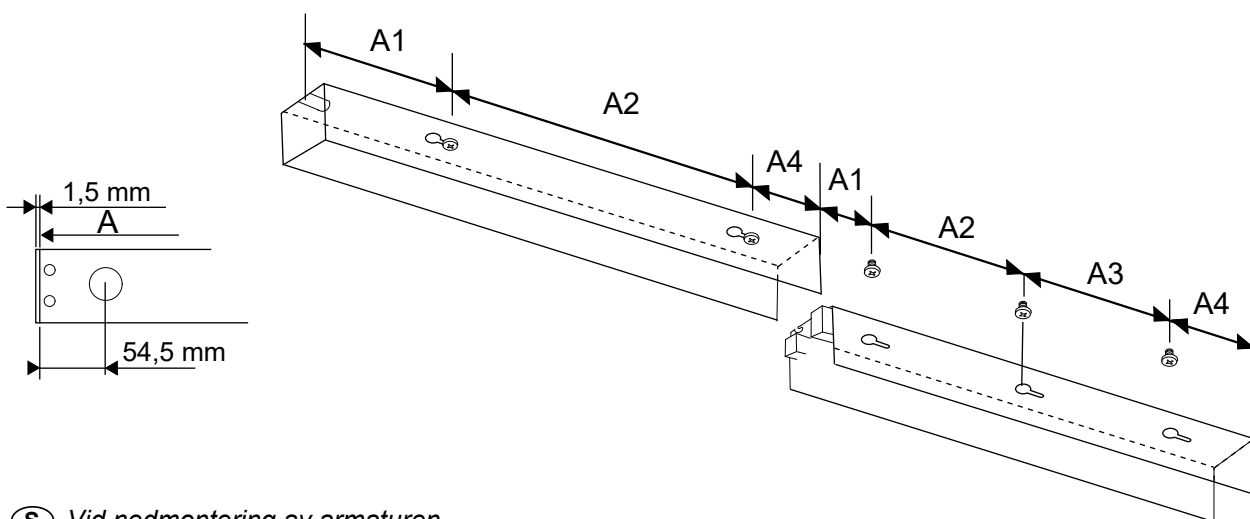


(S) Vid nedmontering av armaturen



(GB) When dismantling of the luminaire

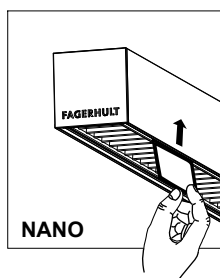


1

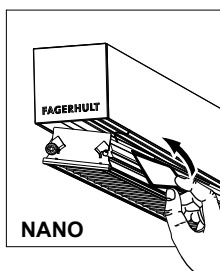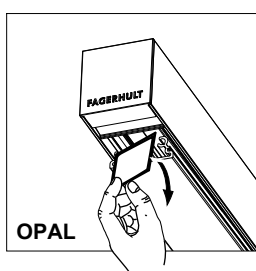


2

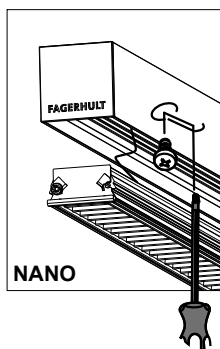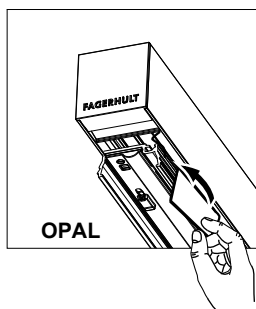

3

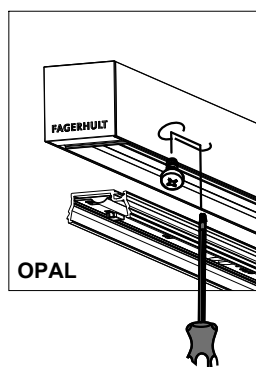

Module	mm	A1	A2	A3	A4
Nano Start, Single & Cont	1200	255	743		255
	2400	255	997	997	255
Opal Start	1200	255	772		255
	2400	255	1005	1005	255
Opal Singel	1200	255	736		255
	2400	255	988	988	255
Opal Cont	1200	255	730		255
	2400	255	984	984	255

 

Ljuskällan ska enbart bytas ut av
tillverkaren eller dess utsedd person.

The light source shall only be replaced by the
manufacturer or its designated person.

(S) Det är lämpligt att denna information
överlämnas till användaren av anläggningen.

(GB) It is appropriate that this information
is passed on to the users of the installation.